

# MEASUREMENT FACILITY AND TEST RESULTS FOR FRIB SUPERCONDUCTING MAGNETS AT IMP

Wenjie Yang<sup>1</sup>, Beimin Wu<sup>2</sup>, Dongshen Ni, Wei Wu, Enming Mei<sup>1</sup>, Lizhen Ma  
 Institute of Modern Physics, Chinese Academy of Sciences, Lanzhou, China  
<sup>1</sup>University of Chinese Academy of Sciences, Beijing, China  
<sup>2</sup>Lanzhou University, Lanzhou, China

## Abstract

The superconducting magnets of the Facility of Rare Isotope Beams (FRIB) are used to focus and steer the heavy ion beams of the driver linac. All the magnets are designed as a solenoid with bucking coils to suppress the stray field. And all of the magnets have superconducting dipole correctors to steer both horizontal and vertical field. Two types of magnets are manufactured in China and most of them have been tested at Institute of Modern Physics (IMP). This paper describes the measurement facilities and magnetic axis measurement method. We also present a summary of the measurement process and test results of the magnetic performance for the magnets.

## INTRODUCTION

The Facility for Rare Isotope Beams (FRIB) will be a new national user facility for nuclear science. It is funded by the DOE-SC, Michigan State University (MSU) and the State of Michigan. The driver linac of the FRIB facility can accelerate all stable isotopes to energies beyond 200 MeV/u at beam powers up to 400 kW [1].

FRIB SC magnet packages are used to focus and steer the heavy ion beams of the driver linac. 80 magnets have purchased from XSMT Co. Ltd, China. It Include 9 short and 71 long magnets. IMP undertook the design tasks. And, then 30 of the magnets tested at IMP.

Each FRIB SC magnet package consists of a main focusing solenoid, a pair of stray field bucking coil, a pair of SC dipole correctors both in the vertical and horizontal directions, a helium vessel, a passive quench protection device and the reference points for showing the magnetic axis of the solenoid coil. The solenoid coil length is 25cm and 50cm respectively [2]. The simulation model for 25cm solenoid coil is shown in Fig.1.

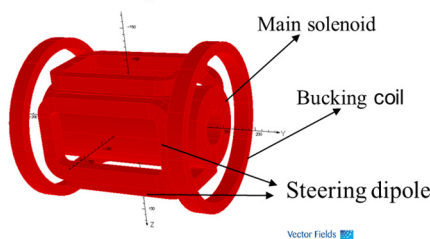


Figure 1: Simulation model of FRIB SC magnet package (25cm).

The FRIB SC magnet is designed as a bath-cooled magnet. The operating temperature of the liquid helium bath is

up to 5.0K. The peak field on the beam axis is approximately 8T. Table 1 summarizes the main parameters of the magnet.

Table 1: Parameters for the FRIB SC Magnet

Parameters	Unit	50cm	25cm
Main solenoid nominal current	A	90	90
Peak solenoid filed at $I_{nom}$	T	8	8
$\int B_z^2 dz$ at $I_{nom}$	T <sup>2</sup> m	28.2	13.6
$\int B_z^2 dz$ uniformity within 80%×R	%	2	2
$\int B_x dz, \int B_y dz,$ integrated field strength	Tm	0.06	0.03
$\int B_x dz, \int B_y dz,$ Uniformity within 15mm	%	5	5
Maximum current of dipole	A	19	19

Due to the stringent space restriction inside the cryo-modules, the solenoids was designed as compact as possible. The inner diameter of the cold bore is 40mm. The mechanical lengths of the SC magnets are 589.53mm and 349.76mm respectively. The solenoid and dipole correctors are mounted inside the helium vessel which has a diameter of 304.8mm. Figure 2 shows the two types of SC magnets after assembly.

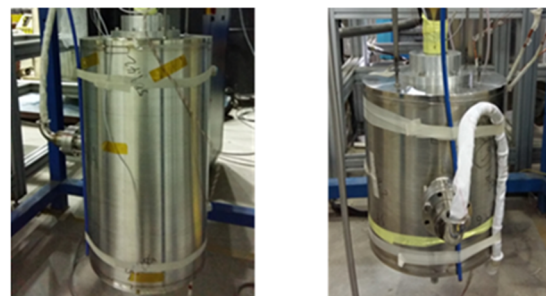


Figure 2: Two types of FRIB SC magnets after assembly and preparing for vertical test in the helium dewar. 50-cm solenoid package(left),25-cm solenoid package(right).

The design of the solenoids minimized the stray field in order to ensure the adjacent SC RF cavities exposed to a field less than specified. The stray field are suppressed by

Content from this work may be used under the terms of the CC BY 3.0 licence (© 2018). Any distribution of this work must maintain attribution to the author(s), title of the work, publisher, and DOI.

the bucking coils. When the solenoid and dipoles are all powered at the nominal currents, the maximum acceptable magnetic stray field is 270 Gauss for all points where  $z \geq 390$  mm from the centre of the 50-cm solenoid and 240 Gauss for 25-cm type ( $z \geq 260$  mm) [3].

The helium vessel was made of 316L stainless steel to minimize residual field and welding also be done in a way to reduce the residual field. The deviation of the field centre axis from the mechanical centre axis should be within 0.3mm.

## MEASUREMENT FACILITY

### Cryogenic Test Station

The cryogenic test station for the FRIB SC magnet base on an old Linde TCF10 helium liquefier which has a liquefaction capacity up to 39L/h. Figure 3 shows main parts of the station. There are three vertical test cryostats in this test station. The inner diameters of the cryostats are 300mm, 700mm, 800mm. The helium gas produced in the testing process is recovered by a 23 Nm<sup>3</sup>/h piston compressor. Then the gas is purified by the purifier in the TCF10 liquefier and liquefied again.

The magnets were pre-cooled by liquid nitrogen. Then the nitrogen was pressured out by helium gas. Before filling in the liquid helium the cryostat should be vacuumed and filled with pure helium. After the test and magnetic measurement, the liquid helium remaining in the test cryostat was pressured back into the helium storage-dewar. This step can save the liquid and reduce the time for warm up.



Figure 3: Cryogenic test station High pressure helium storage tank (1), Air bag (2), Compressor (3), TCF10 (4), Liquid helium dewar (5).

### Vertical Measurement Setup

Due to the small bore size (40 mm), it is hard to develop and insert an anti-cryostat into the magnet for keeping the

measurement device at room temperature. So the measurement system are operated at cryogenic temperature. According to the performance requirements of the SC magnet, the key content of cryogenic test is to measure the integral fields of the main solenoid and steering dipoles. The deviation of the solenoid field centre axis from the mechanical centre are also determined by the field measurements.

The vertical measurement set up and measuring coordinate system are shown in Fig.4. The SC magnet was tested in the 700mm cryostat. There is a motion mechanism on the top of the cryostat which contains 4 motion axes. X&Y are manual axes and Z&C are motor drive axes. The C axis is used for rotation measurement and the Z axis is used for vertical direction mapping. The position resolution is 1 $\mu$ m and 1 seconds for Z and C axis respectively.

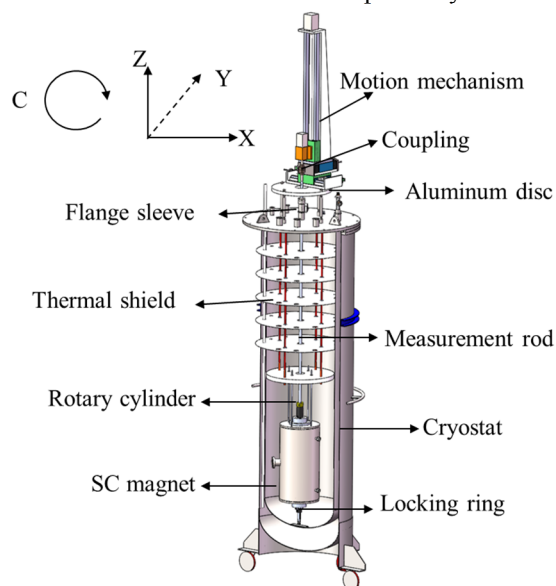


Figure 4: Measurement setup for cryogenic test.

The motion mechanism are mounted on a aluminum disc and connected to the measurement rod by a coupling. By adjusting X and Y axis the centre of the C axis can coincide with the centre of the measurement rod and can be coaxial with the magnet. We reserve a uniform gap between inner surface of the magnet and the rotary cylinder by precision machining. The bottom of SC magnet has a locking ring to keep the magnet stable during the measurement.

### Measurement Rod and Rotary Cylinder

We used a long non-magnetic stainless steel tube as the measurement rod (diameter: 20mm length: 2.8m). The upper end is connected to the motor drive by a coupling and the bottom end has two Hall probes to measure the integrated field. The transverse Hall probes ( $B_r$ ) can mapping the field of the steering dipoles and the axial probes ( $B_z$ ) can measure the field of the main solenoid along the magnet centre. There is a small gap between the G10 wedge and cylinder's groove, which is shown in Fig.5. Based on this configuration, the measuring rod can be used as rotating shaft of the rotary cylinder simultaneously

Additional two transverse Hall probes ( $B_1$  and  $B_2$ ) are installed in the symmetrical position of the cylinder for determining magnetic centre axis. These two probes are rotated to scan  $B_r$  at both ends of the main solenoid where the radial field component is a maximum. At this position the  $B_r$  components are most sensitive for the deviation of magnetic field centre.

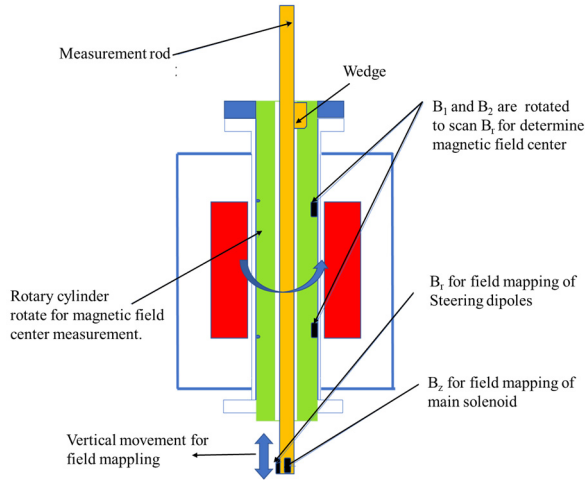


Figure 5: Measurement rod and rotary cylinder. Methods for measuring integral fields and magnetic field centre. Install position of Hall probes

Low temperature axial and transverse Hall probes from Cryomagnetics company are used. They were calibrated at 4.2K up to 9T. The linearity error of the probes are less than 0.2%, the sensitivity varies with the magnetic field are less than 1%. The core of the data acquisition system is a NI industrial PC, which is used to monitor the temperature and voltage, control the power supply and motor drive. A stable, low noise nanovoltmeter model 2182A from Keithley is used to measure the Hall voltage. The multi-channel acquisition can be reached via a multi-channel acquisition switch system, model 2700 also from Keithley.

## MEASUREMENT RESULT

### Training

We carried out the cold performance tests for all the SC magnet. During the initial cold tests, the number of the quenches to reach the nominal operating field at 4.5 K are recorded.

The solenoids and steering dipoles used a passive quench protection device. At 4.2 K, the solenoids are powered and ramped up to their nominal field with a minimum ramp rate of 0.5% of  $I_{nom}$  per second. After solenoid training, each steering dipole should be powered and ramped up to its nominal field separately. At last, all three coils (solenoid, horizontal steering dipole and vertical steering dipole) triple training at their nominal fields simultaneously.

Most of the SC magnet reached their nominal field without quenches. Some of the them needs two or three times training.

### Magnetic Centre

The alignment scans are performed at both ends of the solenoid. The increments of measurement is set  $45^\circ$  with a current of  $I_{nom}$  (dipoles off) at both ends of the solenoid. The solenoid field  $B_r$  data is fitted using sine wave as shown in Fig.6. We compare theoretical results with actual measurements, to determine the displacement and orientation of the axis from the magnetic axis [4].

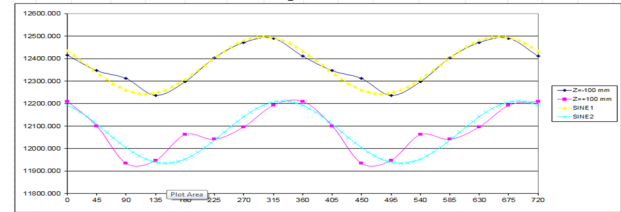


Figure 6: Fitted of the magnetic centre data.

The requirement of deviation of the field centre from the mechanical centre are smaller than 0.3 mm. After the cold test, we mark the field centre on the helium vessel for the solenoid alignment. The flanges are chosen to the location of the fiducials.

### Integral Field

The solenoid field  $B_z$  shall be measured at  $I_{nom}$  every 5 mm along the Z-axis through  $-400 \text{ mm} \leq Z \leq +400$  for the 50 cm solenoid and  $-200 \text{ mm} \leq Z \leq +200$  for the 25 cm solenoid in order to obtain integrated squared field  $\int Bz^2 dz$  [ $T^2m$ ]. The measurement result of a 50cm magnet are shown in Fig.7. The results of series measurement result are 2% larger than the theoretical calculated value.

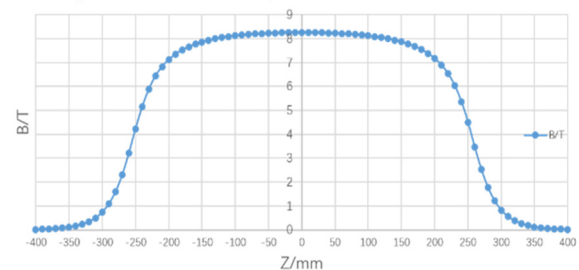


Figure 7: A 50cm magnet measurement result for the integral field of main solenoid.

The integral field of the steering dipole at  $I_{nom}$  be measured along the Z axis parallel to the centre of the magnet and at a distance  $R=15\text{mm}$  from the beam axis. Rotating the measuring rod can measure  $\int Bx dz$  and  $\int By dz$  respectively as Fig.9. The series measurement result can reach the requirement defined in table1.

Content from this work may be used under the terms of the CC BY 3.0 licence (© 2018). Any distribution of this work must maintain attribution to the author(s), title of the work, publisher, and DOI.

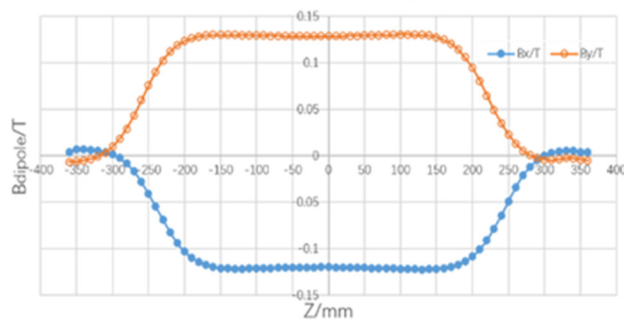


Figure 8: A 50cm magnet measurement result for the integral field of steering dipole.

## CONCLUSION

It is the first time for serial cold test of SC magnet at IMP and all of the results are accepted by FRIB even some of the magnets have been already successfully commissioning.

The measurement facility works well during the test. The major flaw is that the stray field map and the uniformity cannot be measured. Because the roundness of the coil bobbins of the solenoid coils is on high machining accuracy that we can make sure the uniformity beyond the requirement.

The vertical test consumes much time and liquid helium, and has a great risk of failure. (Data acquisition failure move not smooth etc.). Maybe a horizontal test programme would solve these problems.

## REFERENCES

- [1] J.Weï and H.alo, "FRIB ACCELERATOR: DESIGN AND CONSTRUCTION STATUS", in *Proc. HIAT2015*, Yokohama, Japan, JACoW, <http://www.jacow.org>
- [2] SOW for FRIB Solenoid Packages, FRIB-T30602-PD-000437-R002 Issued 30 September 2014.
- [3] Safwan Shanab and Kenji Saito, "Superconducting Solenoid Package Design, Fabrication, and Testing for FRIB", *IEEE Trans. Appl. Supercond.*, vol. 28, no. 2 March. 2018, no. 4004404.
- [4] Ahovi Kponou and Alexander Pïkin, "Analysis of the Magnetic Field Measured by a Rotating Hall Probe in a Solenoid to Locate its Magnetic Axis" *AIP Conference Proceedings* 572, 178 (2001); doi: 10.1063/1.1390113 View online: <http://dx.doi.org/10.1063/1.1390113>.